

IO-Link Hub~~LKHA-xxxx-M12 (8-bit)


----Installation Manual



1.1 Scope of this manual:

This manual applies to the ELCO IO-Link signal Hub (8-bit M12, 2 types):
LKHA-0800P-M12, LKHA-08UP-M12.

These 2 types of IO-Link hub use identical housings, with identical overall dimensions and connector types. There are differences in the signal types supported by different types of products. The coding rules are as follows:

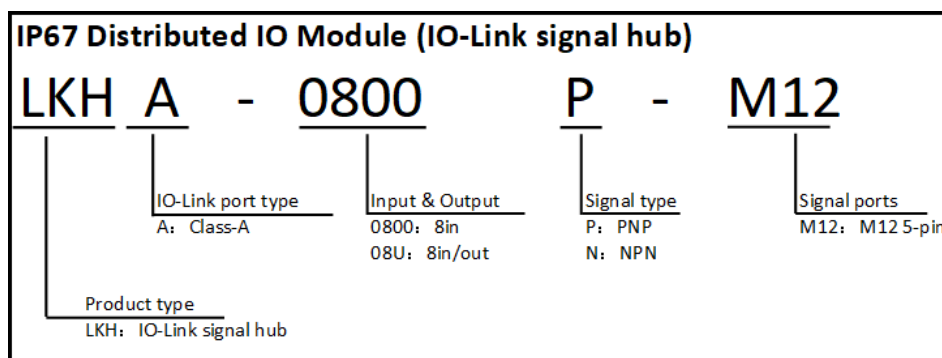

Product overview:

1) LKHA-0800P-M12

Supply Voltage 24VDC, self-consumption max.100mA;

4 x Port module for

8 x Digital Input (Input Supply 8 x 24VDC/200mA)

2) LKHA-08UP-M12

Supply Voltage 24VDC, self-consumption max.100mA;

4 x Port module for

8 x Digital Input (Input Supply 8 x 24VDC/200mA)

or

8 x Digital Output (8 x 24VDC/500mA, max. in total 2A)

You can see the datasheet of 2 types in Section 2.1.

This product is specifically designed for industrial use and needs to be applied under specific conditions. This product serves as an IO-Link device and needs to be connected to the IO-Link master for use.

1.2 Basic knowledge requirements

Operators need to have basic knowledge in the fields of electrical and automation engineering. Any improper operation may cause harm to the equipment or human body.

This manual describes each component based on valid data at the time of release, and new components and parameter adjustments will be updated in the new version of the manual.

1.3 Guide:

This manual describes the hardware of IO-Link signal Hub.

Covered topics are:

- Installation and wiring
- Commissioning and diagnostics
- Components
- Article numbers
- Technical specifications

1.4 Technical support:

Please contact your local ELCO representative or call hotline if you have any questions about the products described in this manual.

Additional information about ELCO products is available:

Corporate name: Tianjin Elco Automation Co., Ltd

Company address: No. 12, 4th XEDA Branch Road, Xiqing Economic-Technological Development Area ,Tianjin China

Website: <http://www.elco-holding.com.cn/>

TEL: +86 22 23888288

1.5 Electrical installation:



WARNING

Danger due to electrical voltage!

An unqualified installation can affect the use of the equipment or lead to equipment damage!

- Only qualified electrical engineering personnel may install the modules.
- Only operate on 24 V DC voltage.
- Must be connected to limited power source (LPS).
- Use Copper Conductors Only. Use min. 22 AWG for IO-Link port connector and min. 26 AWG for Signal I/O connector.

ATTENTION

La tension pose un danger!

Une installation non conforme peut affecter l'utilisation de l'appareil ou causer des dommages à l'appareil!

- Seuls les ingénieurs électriciens qualifiés peuvent installer les modules.
- Fonctionne uniquement à 24 V DC.
- Doit être connecté à une alimentation électrique limitée (LPS).
- Utilisez uniquement des conducteurs en cuivre. Le connecteur de port io - LINK utilise un minimum de 22 AWG et le connecteur d'E / s de signal un minimum de 26 AWG.



ATTENTION

Damages due to open plugs and sockets!

Enclosure rating Type 1 is only guaranteed if all connections are tightly sealed.

- Seal unused plugs and sockets with screw plugs or caps.

1.6 Disclaimer of liability:



- Only qualified personnel may perform installation, commissioning, modification, inspection and retrofitting activities.
- Follow the applicable regulations and standards in the operating instructions and manual.
- Follow the safety regulations of the Employers' Liability Insurance Association and electrical engineering.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. We assume no liability for product damage or subsequent damage arising from non-observance of the regulations or improper handling of the products.

2.1 Datasheet


Ordering data		
Product type	LKHA-0800P-M12	LKHA-08UP-M12
Description	8 DI	8 DI/DO
	Class-A, 4*M12, PNP	
Power supply		
Supply voltage	24 VDC (18...30 VDC)	
Supply requirement	Limited power source	
Self consumption	Max. 100mA	
System & Input supply	Us, Max. 2A	
Output supply	-	Ua, Max. 2A
Connections		
IO-Link	Class-A: 1 x M12 A-code 4pin, Male	
Power supply	Included in IO-Link interface	
Signals	4 x M12 A-code 5pin, Female	
Interface		
Input channels	8	Max 8 *)
Input supply current	Max. 200mA per channel	
Input type	PNP sensors, mechanical switches, dry contacts, etc..	
Input delay	1.6 ms	
Output channels	-	Max 8 *)
Output current	Max. 500mA per channel, 2A in total	
Output type	Resistive, Pilot Duty	
Output frequency	Max. 100Hz	
Diagnostics		
Communication indication	LED indication, Communication message	
Voltage detection	Support, Low voltage alarm	
Short-circuit & Overload	Support, LED indication	
General data		
Enclosure rating	Type 1	
Relative humidity	0~95 %	
Altitude	Max. 3000m	
Environment	Indoor use	
Ambient temperature	-25~70 °C	

Dimensions (W*H*D)	55x93x28 mm
Weight	113g
Overvoltage Category	II
Pollution degree	2
Type	Enclosed type


*): Port type can be set to INPUT/OUTPUT by PLC software.

2.2 LED indicator


IO-Link signal hub indicator

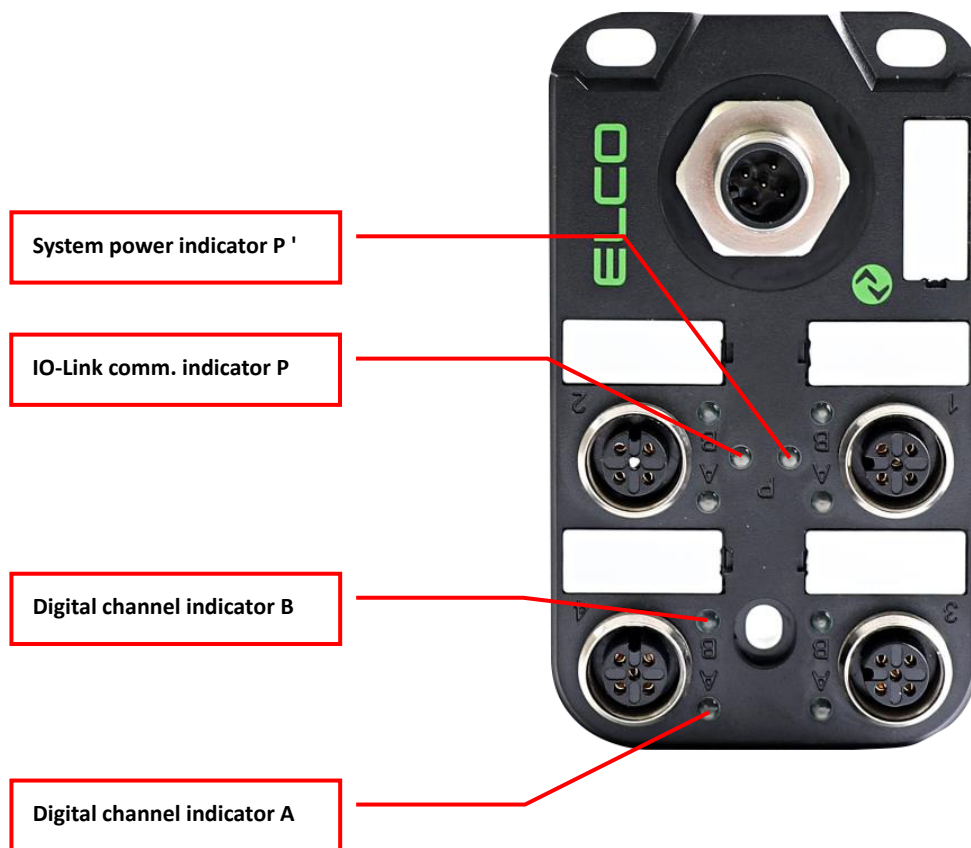


2.3 IO-Link signal hub dimensions

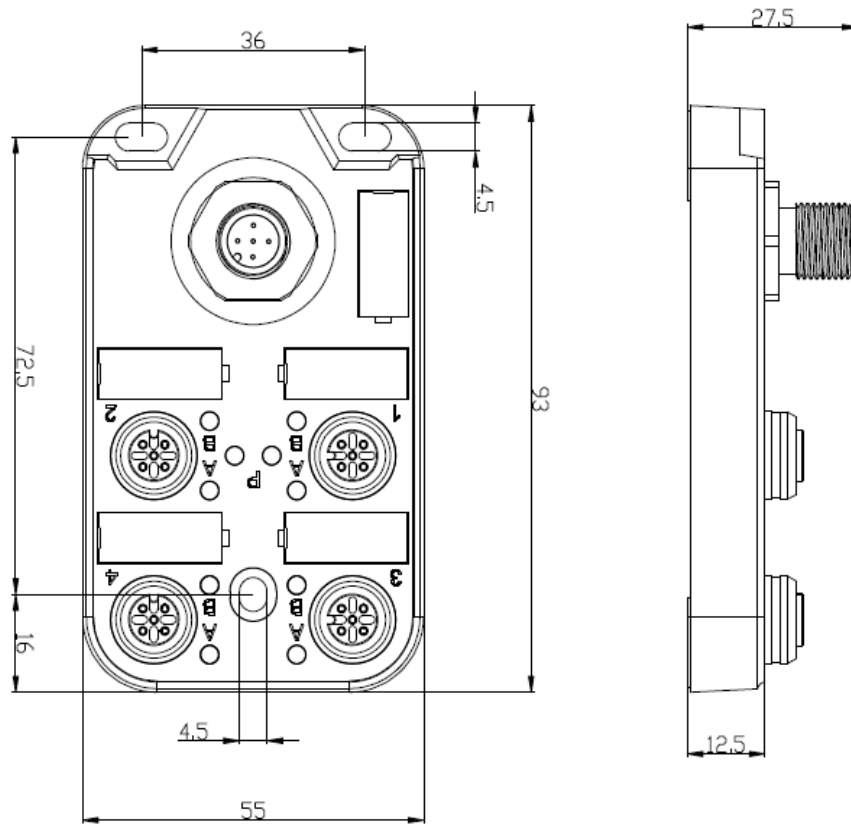

2.4 Mounting the module

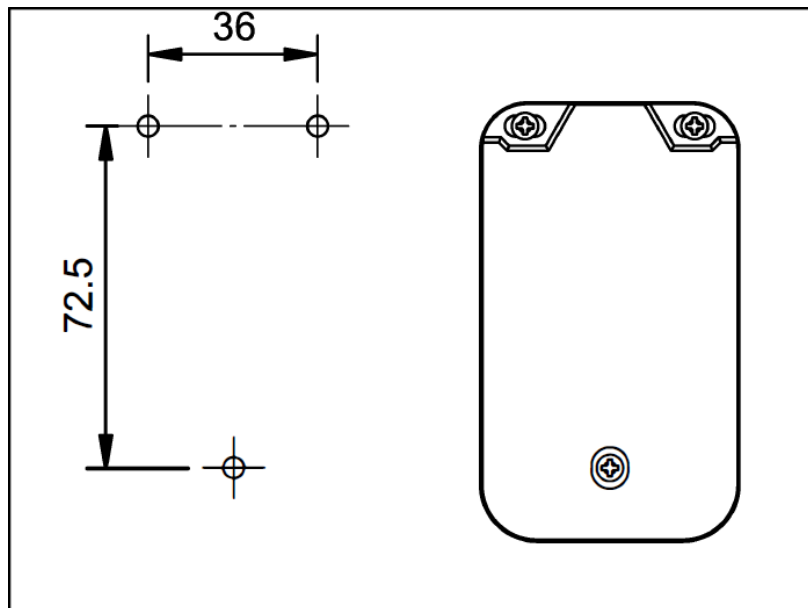

Dimensions in mm

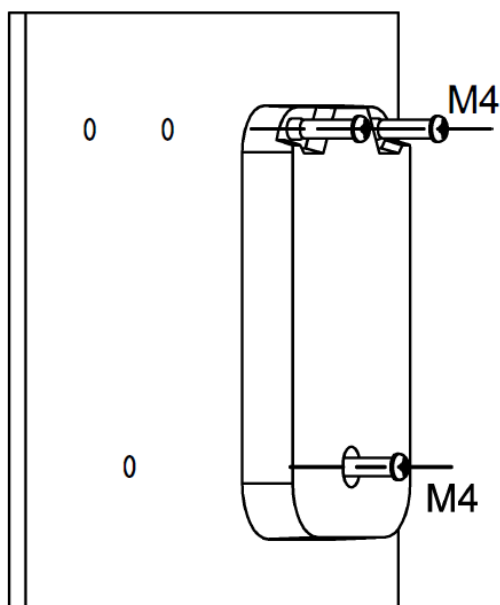


Use screws that are suitable for the mounting surface structure.

2.5 Wiring


Please make sure to cut off power supply when wiring to ensure safety.

1) IO-Link port connector (M12 A-Code 4-pin, Male)

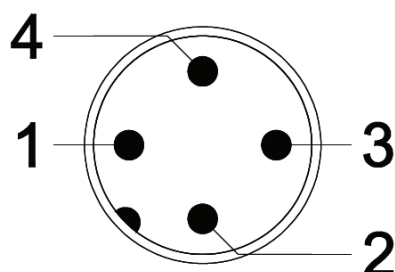

Terminal	Class-A
1	Power supply 24V+ (Us)
2	Power supply P24 (Ua)
3	Power supply GND
4	IO-Link C/Q


2) Signal I/O connector (M12 A-Code 5-pin, Female)

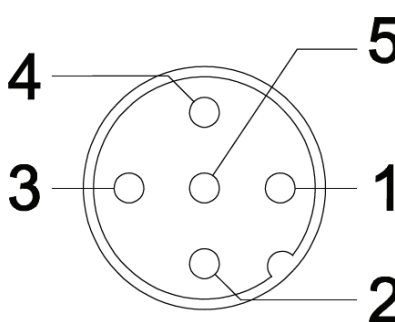


Terminal	M12 connector	
1	Power supply 24V+	
2	Signal input/output B	2 nd signal
3	Power supply GND	
4	Signal input/output A	1 st signal
5	Function grounding FE	

3) Wiring example


a) Double PNP input signal – 1 connector connects 2 DI. LKHA-0800P-M12, LKHA-08UP-M12 support this connection.

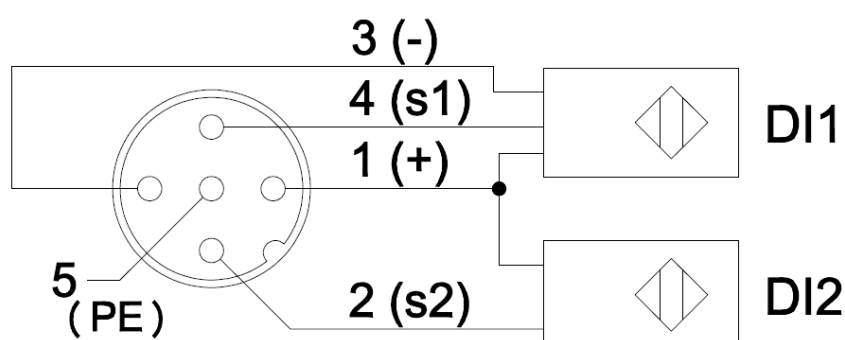

b) Double PNP output signal – 1 connector connects 2 DO. LKHA-08UP-M12 support this connection.

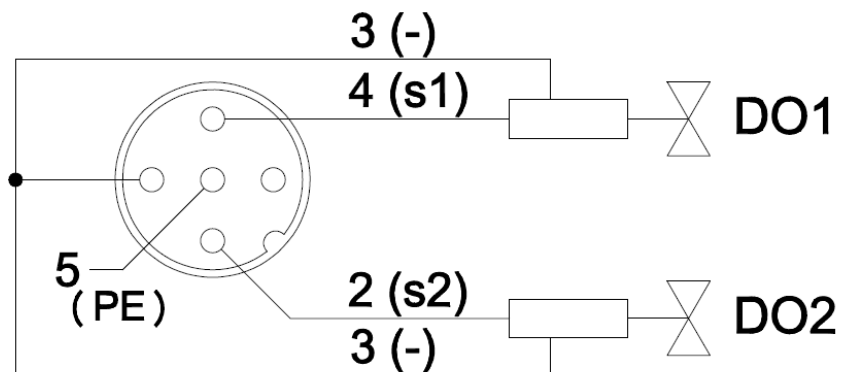

c) PNP Input and output signal – 1 connector connects 1 DI and 1 DO. LKHA-08UP-M12 support this connection.

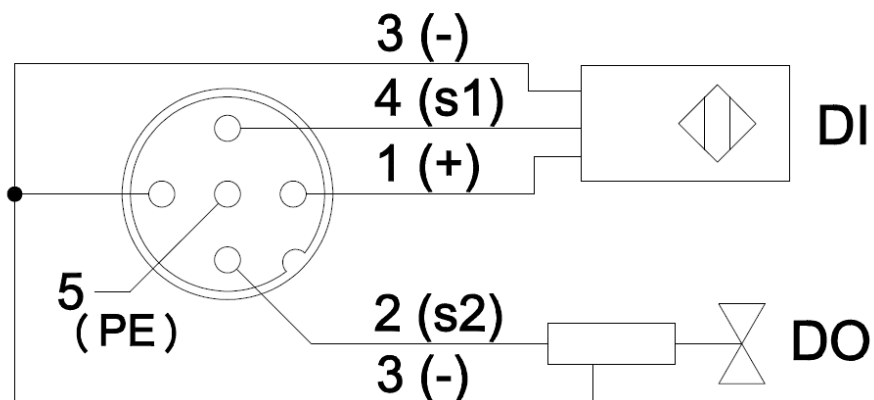

2.6 IO-Link signal hub indicator

Name	Status	Meaning	Fault cause
Module communication Indicator P	Green flash	Receive IO-Link communication	–
	Off	No IO-Link signal received	1.Expansion cable failure 2.Master IO-Link port problem 3.Slave module is damaged
Signal / status Indicator	Red	Abnormal signal	1.Signal overload or short circuit 2.Slave module is damaged
	Green	Have signal	–
	Off	No signal	–